



Setup Instructions For Your Indoor/Outdoor Bike Showcase

Thank you for purchasing the Bike ShowCase by CarCapsule, the leader in vehicle storage solution innovation and protection. Please inspect the boxes & equipment for any damages or missing pieces and please contact CarCapsule immediately with any issues or concerns at: 219-945-9493.

1. Remove your Bike ShowCase from its shipping box and unfold it. **(fig.1)**
2. Remove the air pump and two hoses from the box and attach the “RIBBED” inflation/deflation hose to the inflation port of the pump. **(fig.2)**
3. Locate the gray inlet fitting on one of the back corner air columns, and connect the other end of the hose. **(fig.3)** Plug the power cord for the pump unit into the receptacle labeled “PUMP CONNECTION”, **(fig.4)** and plug the three terminal “GROUNDED” plug from the pump assembly into a known working power source and turn on the pump.

Note: During inflation you may be required to assist the support columns to allow air flow and become upright. When your ShowCase is fully inflated, the air columns will become firm and offer resistance when pressure is applied. **(fig.5)**

4. Once the Showcase is fully inflated, you may remove the inflation hose; relocate the pump to the inside of the Showcase and attach the smooth “maintenance hose” **(fig. 6)**, and the small hose to the pressure switch. **(fig.7)** The pump switch should remain in the “ON” position at all times to maintain inflation.
5. Plug the fan power supply into the receptacle marked “SHOWCASE FAN”. **(fig.8)** Install the 12V fan to the Velcro air intake pad, and connect the 2.1mm power connector to the fan. **(fig. 9)**
6. Install the filter by pushing the brim of the filter into the flap provided on the outside of the air intake. **(fig.10)**

NOTE: Please refer to the ShowCase setup video at: www.CarCapsule.com/videos/



Weather Operating Tips:

- If the temperature is below 50 degrees, open the ShowCase box and let sit at room temperature for 24 hours. This will make the setup much easier.
- To increase airflow thru the ShowCase to dry wet vehicles, extremely hot weather, and/or high humidity, leave the zippers open about a 6" on one of the access doors. This will increase the air change in the ShowCase.

ShowCase Care:

- Keep the air filter clean by hand washing it in warm water with mild dish soap and allow it to dry. Or blow out with an air hose from the backside.
- If your ShowCase gets dusty or dirty you can use a car duster or warm water with mild dish soap to clean.
- When not in use, store the ShowCase up off the floor in a dry, rodent free place.

Recommendations:

- Using another cover is not recommended, as it may potentially trap moisture.
- DO NOT place any source of heat inside the ShowCase, not even a light bulb.
- DO NOT use the indoor ShowCase outdoors.

For more information, contact:
CarCapsule USA @ 219-945-9493
Web: www.CarCapsule.com
Email: Info@CarCapsule.com



MANUFACTURER'S WARRANTY: THIS WARRANTY IS THE SOLE AND EXCLUSIVE

The ShowCase by CarCapsule is guaranteed for one year against all defects in workmanship and materials. Repair or replacement will be made upon receipt of product by CarCapsule USA freight prepaid. Using the ShowCase outdoors will void all warranties. Please contact the place of purchase prior to shipping for warranty work.

WARRANTY GIVEN WITH RESPECT TO THE PRODUCT AND ALL OTHER EXPRESS WARRANTIES ARE HEREBY EXCLUDED, INCLUDING THE WARRANTY OF IMPLIED MERCHANTABILITY. NEITHER CARCAPSULE USA NOR AN AUTHORIZED CARCAPSULE PRODUCT DEALER WHO SELLS THE PRODUCTS IS RESPONSIBLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION ON IMPLIED WARRANTIES AND/OR THE LIMITATION OR EXCLUSION OF CERTAIN DAMAGES MAY NOT APPLY TO YOU.